

# PureSilk

## Women Electric Razor

Read this manual carefully and keep for future reference.

### **PRECAUTIONS**

1. THIS IS NOT A TOY. Always keep away from children.
2. This shaver is not waterproof. Do not submerge in liquid.
3. Do not use this shaver under running water. All excessive water will damage this product.
4. This shaver is designed to be used by adults for shaving and trimming human body hair. Do not use for any other purpose.
5. This is a personal item and is not recommended to be used by multiple individuals.

### **BEFORE USE**

This product requires 2 AAA 1.5V alkaline batteries for operation (Not Included).

1. Open the battery compartment by pushing down on the battery cover plate.
2. Insert the 2 AAA batteries.
3. Make sure the battery compartment is closed and the battery plate cover secured before use.
4. Apply a few drops of any machine lubricant oil to allow smooth blade movement. (Not Included)

### **DIRECTIONS FOR USE**

1. Remove the plastic blade cover guard.
2. Turn the power on
3. Place the shaver on the desired skin area designated for shaving or trimming.
4. Move gently in the opposite direction of the hair follicles. Do not use force to avoid skin irritation.
5. Use comb trimmer edge for areas that need just trimming.

### **CLEANING DIRECTIONS**

1. Clean the unit thoroughly by using the brush supplied and remove all hair from the head and blades of the unit.
2. IF NEEDED: Rinse the blade under tap water for only a few seconds. Dry well immediately. Do not leave to drip dry as this will cause rust to the blades.
3. Apply a few drops of any machine lubricant oil to allow smooth blade movement.

For any questions, please call Home Aide Diagnostics, Inc. 1-800-915-0116.

This product has a 1 year warranty on parts free from factory defects.